

CLOVER 5

Handheld Video Magnifier

User Guide

Rev E

Contents

Precaution	1
Quick Start	3
Overview	3
Compositions	5
Accessories	8
Battery and Charging	9
Writing stand	14
Operation	15

Power Button	15
Beep Type	16
Magnification	18
Color Mode	19
Brightness	22
Two-Color Tuning	23
Lighting	25
Freeze	25
TV Connection	27
Memory	29

Auto power saving.....	29
Restore	30

Troubleshooting 31

The unit does not turn on	31
Black screen or White screen	31
The image does not change	32
Smudges or blemishes on the screen	33

Specifications 34

Precaution



Before using Clover 5 for the first time, you must charge its battery. Refer to **Battery and Charging** section for more details.



Always operate the unit in a place where the temperature is between 10° and 35°C (50° and 95°F).



Keep the unit away from wet areas, rain, and other sources of liquids. Do not submerge the unit.



Do not attempt to repair the unit. Any unauthorized attempt will void the product warranty. Contact your distributor to service.



Use the supplied power adapter and battery.

Quick Start

 
Overview

Thank you for purchasing CLOVER 5.


CLOVER 5 is a portable, handheld video magnifier with a 5 inch widescreen LCD display, providing sharp, clear images that are easily viewed in various magnification level and color mode.

The unit allows you to put the magnifier on or close to the object for continuous zoom or freeze the image

for further viewing. It also has an integrated fold-away writing stand. This unit is ideal for viewing labels, books, newspapers and more.

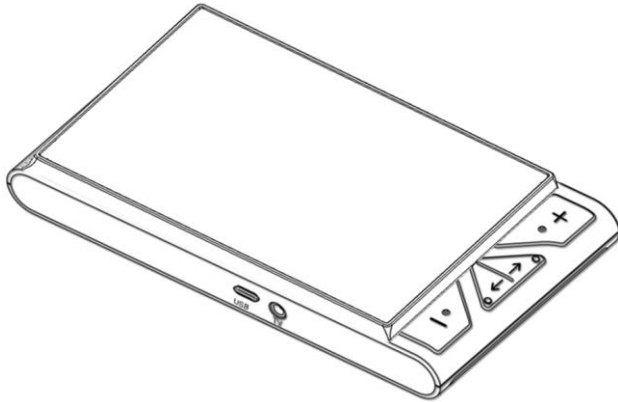

Compositions

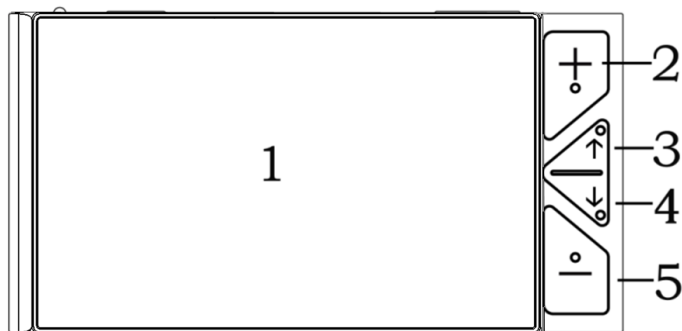 


1. LCD screen

2. Zoom In

3. Color Mode Up

4. Color Mode Down

 5. Zoom Out

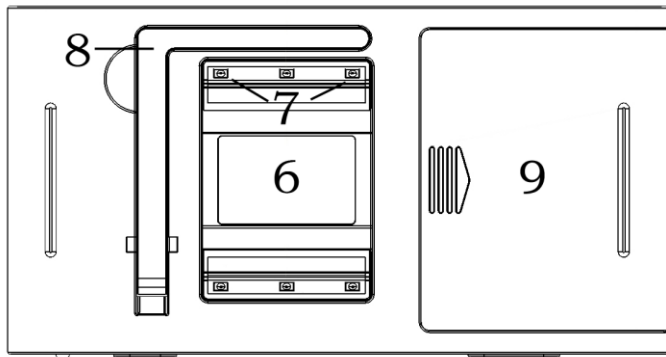


6. Camera

8. Writing stand

7. LED lights

 9. Battery slot

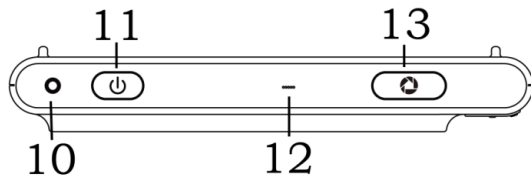


10. Power LED

11. Power

12. Beep

 13. Freeze

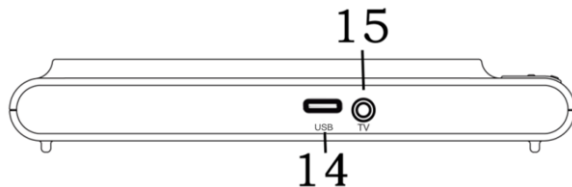

14. USB Type-C Port

15. TV port

Accessories



User Manual



 
Power
Adapter




Cleaning Cloth



Carrying
Case

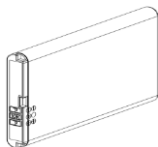

battery

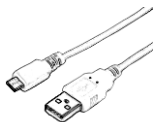 

USB Cable

 


TV Cable

Battery and Charging

Battery installation

1. Turn the unit to make the back face up

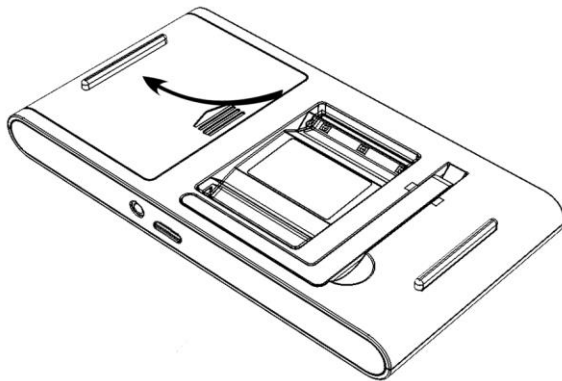


-
2. Press the arrow icon on the battery cover and slide outward to open the battery cover
3. Insert the battery to the right position in battery slot
4. Place and slide back the battery cover

Charging the battery

1. Connect the supplied USB cable to the power adapter
2. Connect the supplied USB cable to the USB port on the unit

 3. Plug the power adapter into an AC outlet and start charging

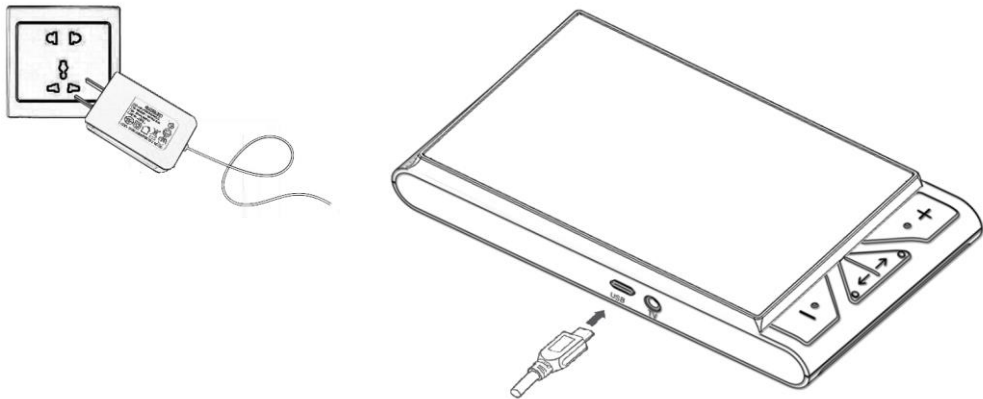


The status of Power LED indicator

- Charging when the unit is off, the power LED will be green, and then auto turn off when fully charged. A fully Charging will take about 5 hours, and will support the unit working continuously for about 3 ~ 3.5 hours
- Charging when the unit is on, the power LED will be green

- When the unit is on and the power adaptor is not connected, the power LED will be green when the battery is high and will be red when the battery is low. When the red light starts to flash, you will need to charge the battery
- You can also check the battery status by pressing the power button; refer to the following instructions for more details

Writing stand

 Open the writing stand as the following figure shows. And you can write under the camera.

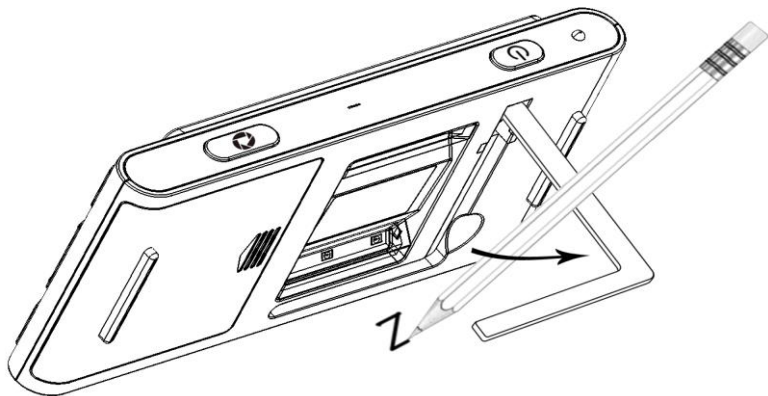

Operation

Power Button

- ☐ Press and hold the power button  for 3 seconds to turn on the unit when it is off
- ☐ Press and hold the power button  for 3 seconds to turn off the unit when it is on

- ❑ Press the power button  to check the current status of battery capacity, color mode, freeze mode and beep
- ❑ Press other button when holding the power button will make combo function, refer to the following instructions for more details

Beep Type

- Unit on/off beep

- Button beep
- Threshold beep
- Low battery beep

Beep Control:

- ☐ Press and hold the freeze button  for 3 seconds to turn on/off the beep

Magnification

- ❑ Press the Zoom In button  to increase magnification, and Holding the Zoom In button  for continuous increasing
- ❑ Press the Zoom Out button  to decrease magnification, and Holding the Zoom Out button  for continuous decreasing
- Magnification Range: 4x – 20x

Color Mode

A color mode is a pre-defined color combination. Full color mode is suitable for picture, map viewing, and enhanced contrast mode is combined with different foreground and background colors and can help to read clearly.

- ❑ Press the Color Mode Down button ↓ to cycle in one direction through the color combination list
- ❑ Press the Color Mode Up button ↑ to cycle in the other direction through the color combination list

- ❑ Press the Color Mode Up button ↑ and the Color Mode Down button ↓ at the same time to quick switch between Full color mode and current enhanced contrast mode

- ❑ Holding the Color Mode Up button ↑ and the Color Mode Down button ↓ at the same time for 5 seconds to switch between the Simplified Color Combination List and the Integrated Color Combination List (factory default)

The Simplified Color Combination List (6 modes):

- | | |
|--|---|
| ☒ Full Color | ☒ White on Black |
| ☒ Black on White | ☒ Yellow on Black |
| ☒ White on Blue | ☒ Yellow on Blue |

The Integrated Color Combination List (20 modes)

- | | |
|---|---|
| ☒ Full Color | ☒ White on Black |
| ☒ Black on White | ☒ Yellow on Black |
| ☒ Black on Yellow | ☒ White on Blue |
| ☒ Blue on White | ☒ Yellow on Blue |
| ☒ Blue on Yellow | ☒ Green on Black |

- | | |
|---|---|
| ☒ Black on Green | ☒ Violet on Black |
| ☒ Black on Violet | ☒ Blue on Black |
| ☒ Black on Blue | ☒ White on Green |
| ☒ Green on White | ☒ White on Red |
| ☒ Red on White | ☒ Red on Black |

Brightness

Adjust the display brightness for Full color mode and Enhanced contrast mode. Factory default value will be highlighted green.

- ❑ Combo: Power button  and Zoom In button , increasing the brightness
- ❑ Combo: Power button  and Zoom Out button , decreasing the brightness

Two-Color Tuning

By fine adjusting the combination of foreground and background color in Enhanced contrast mode, the

tuning will improve the adaptability for viewing different materials. Factory default value will be highlighted green.

- ❑ Combo: Power button  and Color Mode Up button  , more background color.
- ❑ Combo: Power button  and Color Mode Down button  , more foreground color.

Lighting

- ❑ Combo: Power  & Freeze button , turn on/off the LED Lighting

Freeze

Freezing an image on the LCD screen can be useful for further reading, and also further zooming in or zooming out or changing the color mode for a better view. The brightness adjusting is not allowed when freezing.

- ❑ Press Freeze button  to lock the active image

- ❑ Press again Freeze button  to release
- ❑ When increase the magnification of the locked image, you can use the following combo button to navigate.

Power  & Color Mode Up  , navigate upward

 
Power  & Color Mode Down  , navigate downward

Power  & Zoom In  , navigate leftward

Power  & Zoom Out  , navigate rightward

TV Connection

Connect to your TV for a better and larger viewing.

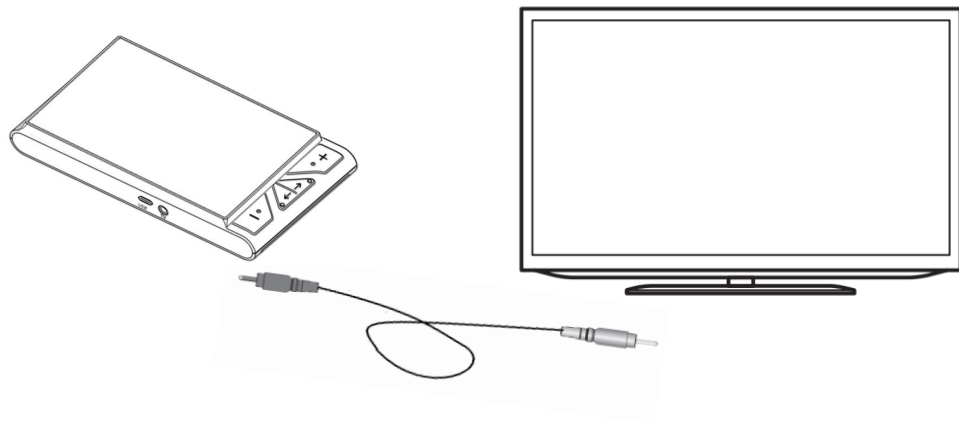

- ❑ When plugging in the TV Cable to the TV port on the unit, you need to select the appropriate TV output mode (PAL or NTSC mode).
- ❑ Press Zoom In button  or Zoom Out button  to choose PAL or NTSC, then press Freeze button  to confirm your selection and then the image shall be shown on TV
- ❑ After unplugging the TV cable, the image will automatically return to the LCD screen of the unit

Memory

The unit will memorize automatically the most recent settings such as color mode, magnification, beep when power off normally and use them in the next power on

Auto power saving

If no operation and no moving for over 3 minutes, the unit will turn off automatically

Restore

- ❑ Holding the Freeze button  and the Zoom Out button  at the same time for 3 seconds to reset to the default factory settings. Auto power off when resetting is done.

Troubleshooting

The unit does not turn on

- Connect to the power adapter
- Charge the battery
- Reinstall the battery

Black screen or White screen

- If the unit is sitting on a flat pure surface, the screen may be black or white, Lift the unit off to ensure change happens.

- Adjust the magnification
- Adjust the color mode
- When the unit is connected to TV, the screen is black
- Restart the unit
- Reinstall the battery

The image does not change

- If the unit enter the freeze mode, the image will not change

- Press power button to check the current status
- Restart the unit
- Reinstall the battery

Smudges or blemishes on the screen

- Adjust brightness
- Clean the LCD screen and camera

Please contact your local distributor if problem is not solved

Specifications

- **Display:** 5 inch wide screen LCD
- **Size:** <=152*80*22mm
- **Weight:** <210 grams (Battery included)
- **Color Mode:** Simplified 6 modes; Integrated 20 modes
- **Magnification:** Approximately 4x ~ 20x
- **Battery:** Rechargeable & detachable Li battery
Nearly 3~3.5 hours continuous use
Charges in approximately 5 hours
- **Power Adapter:** USB port; input 110-240V; output 5V/1A